




STO 300

Outdoor temperature transmitter
Utomhus temperaturtransmitter
Außentemperaturmeßumformer
Convertisseur de sonde de température extérieur
Transmisor de la temperatura externa
Transformatore sensore esterno


0FL-4183-000

Instruction
Montageanvisning
Bedienungsanleitung
Instructions d'installation
Instrucciones de empleo
Istruzioni per installazioni


1.

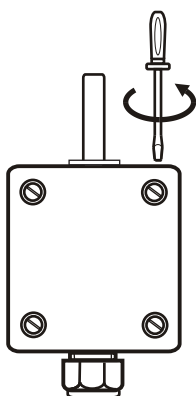


2.

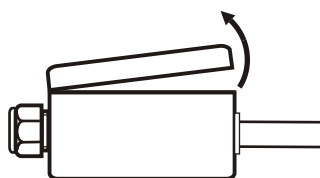


3.

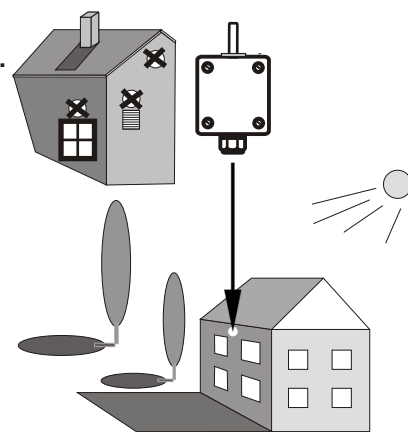

4.

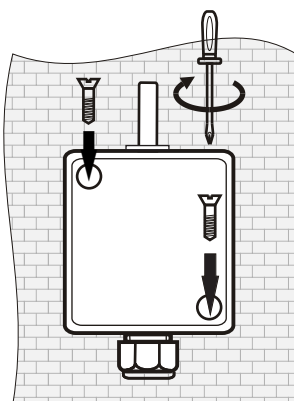

5. 4...20mA

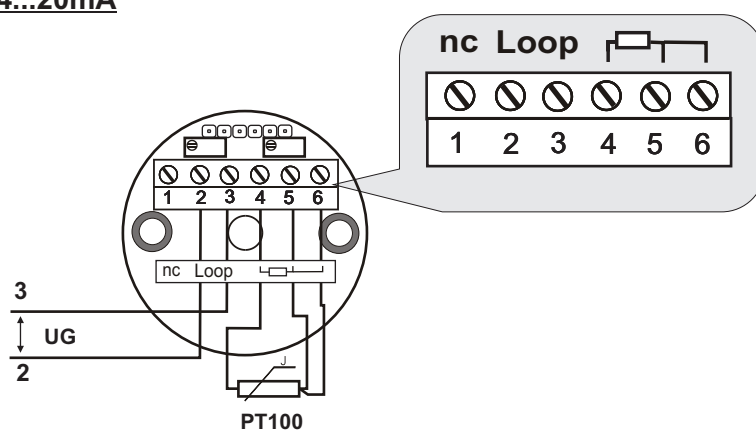

UG=15...36 V DC