




# TAC Xenta 471

Analog ingångsmodul  
Analog Input module  
Analogeingangsmodul


OFL-3952-000

Installationsanvisning  
Installation instruction  
Installationsanleitung


1

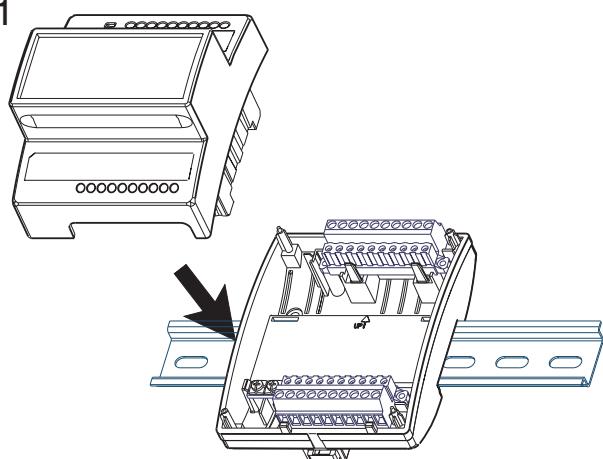

2

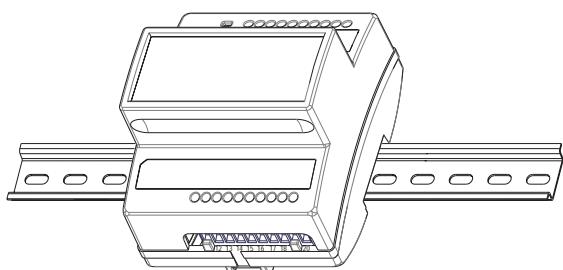

## TAC Xenta 471

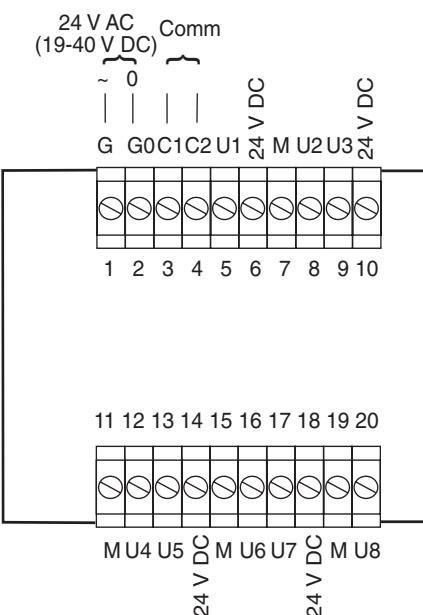

**Observera!** Figuren visar endast generella inkopplingar. För detaljer, se dokumentationen till de specifika applikationerna.





**Note!** The figure only shows connections in general. For further details, please refer to the documentation on the specific applications.


**Anmerkung!** Die Abbildung zeigt lediglich die allgemeine Klemmenbelegung. Weitere Einzelheiten gehen aus der Dokumentation der Anwendung hervor.

>>>

(mm:)

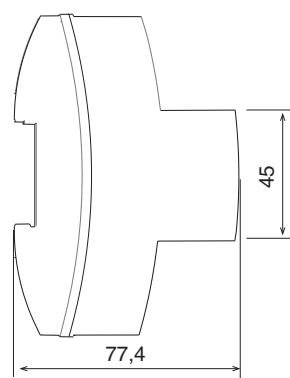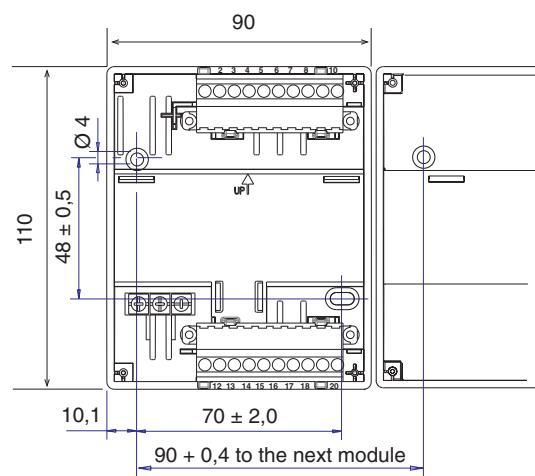

Blocktyper i TAC Menta	Plintbeteckn.	In/utg.-slag
Block types in TAC Menta	Terminal ref.	Type of I/O
Blocktypen in TAC Menta	Klemmenbez.	E/A-Typ
AI - Analoga ingångar	U1 - U8	Analoga ingångar
AI - Analog inputs	U1 - U8	Analog inputs
AI - Analogeingänge	U1 - U8	Analogeingänge

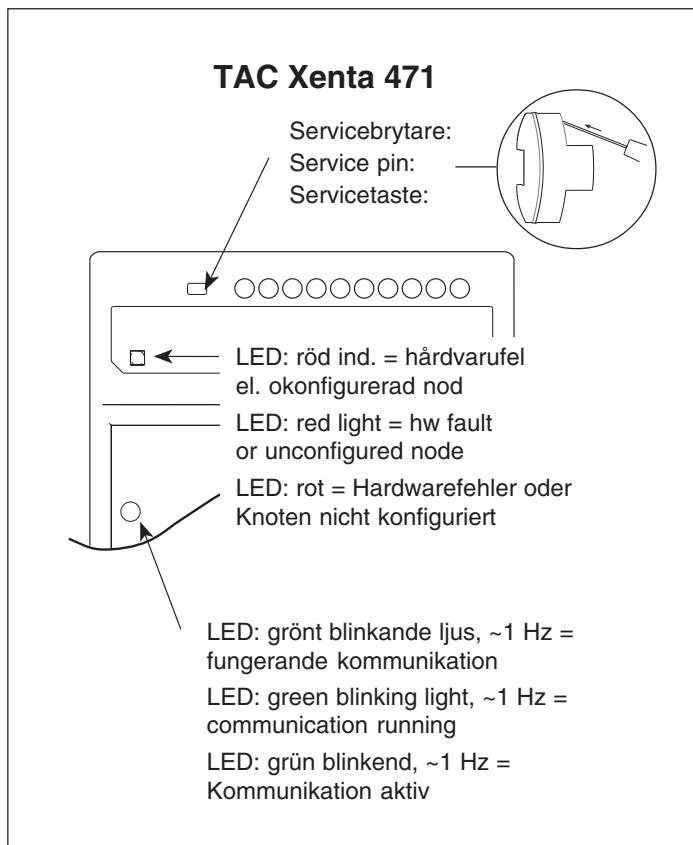

TAC AB, Jägershillgatan 18, SE-213 75 MALMÖ, SWEDEN, +46 40 38 68 50 (vx), [www.tac.se](http://www.tac.se)